





CORE COTTON TOWEL ROLL DISPENSER INSTRUCTIONS

How to change the roll towel?


1.

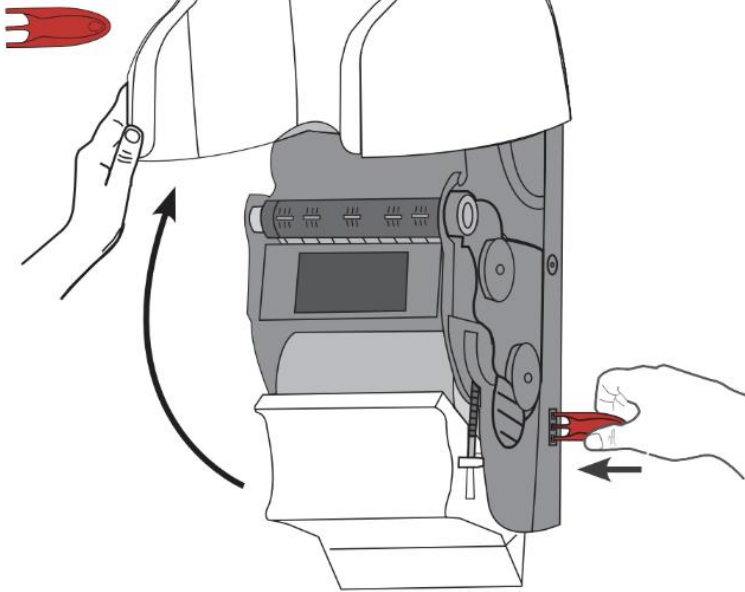


2.

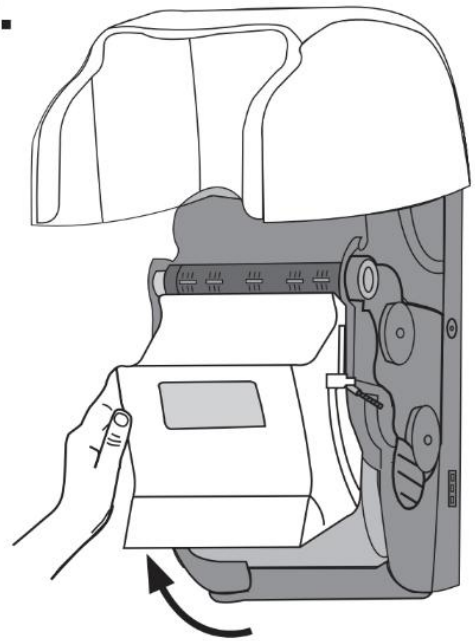



3.

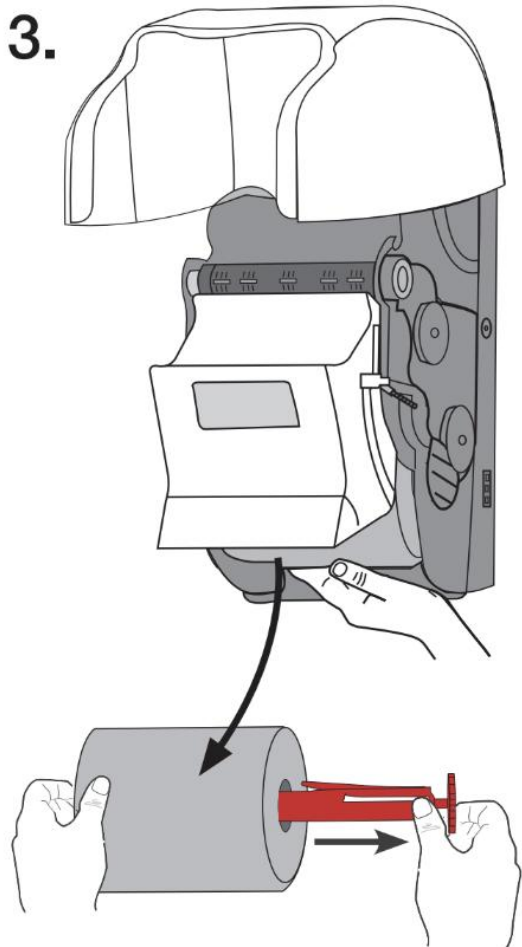



4.

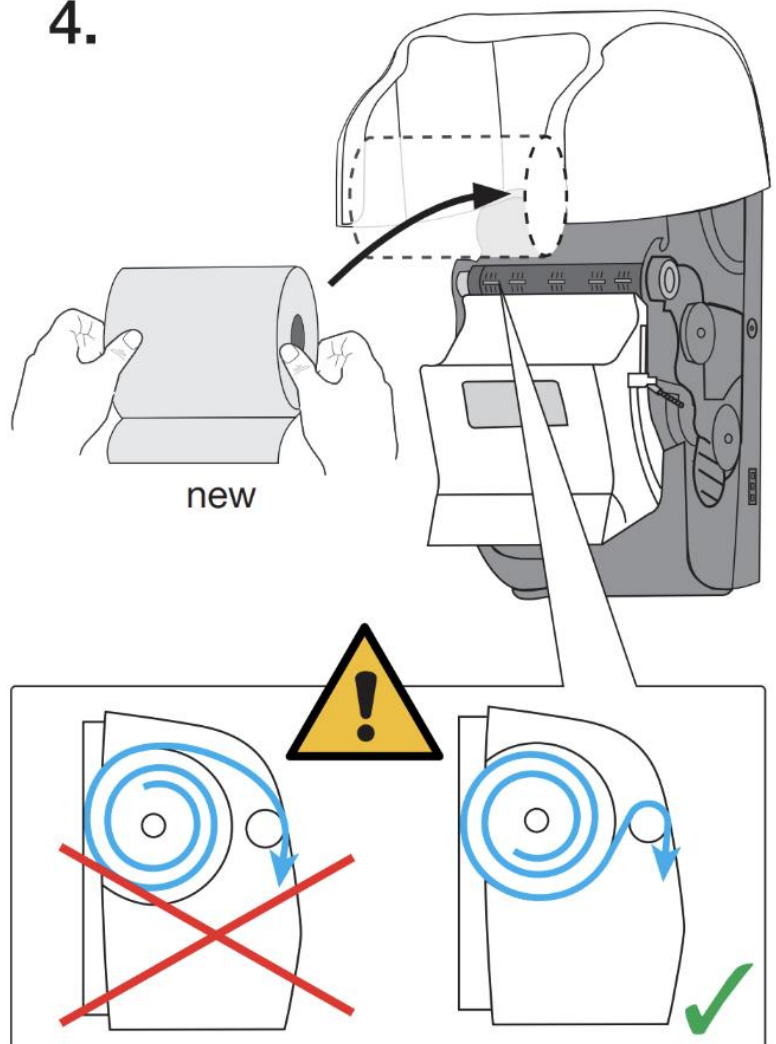

 
5.

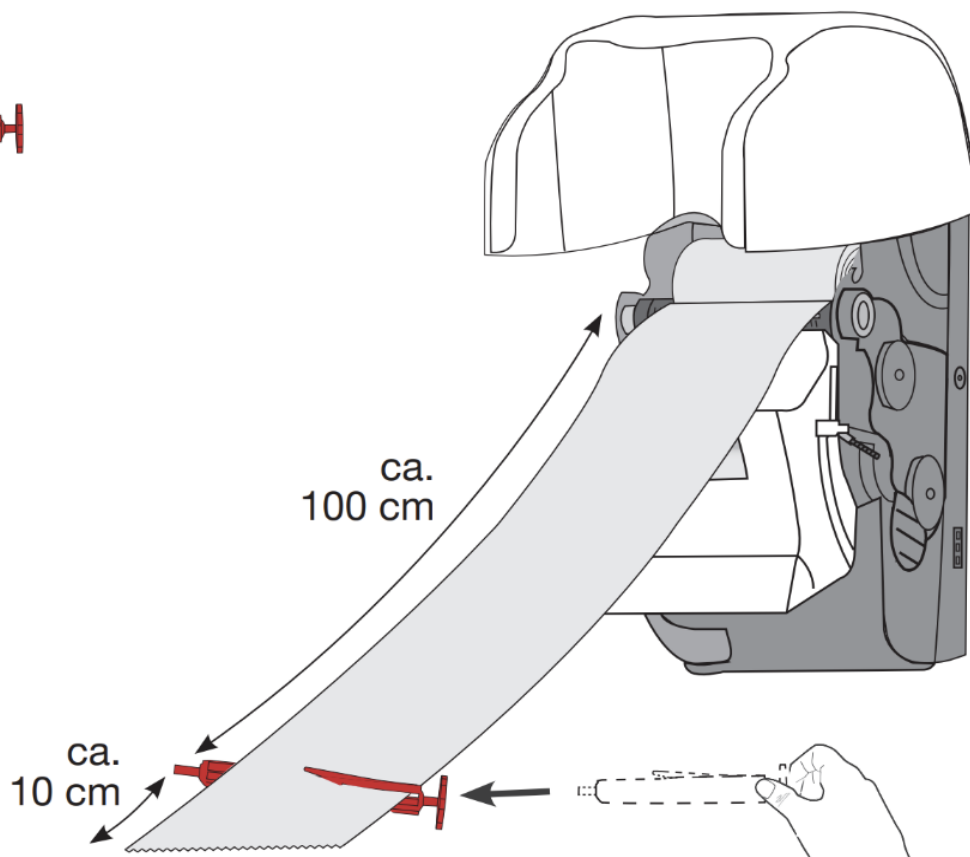


6.

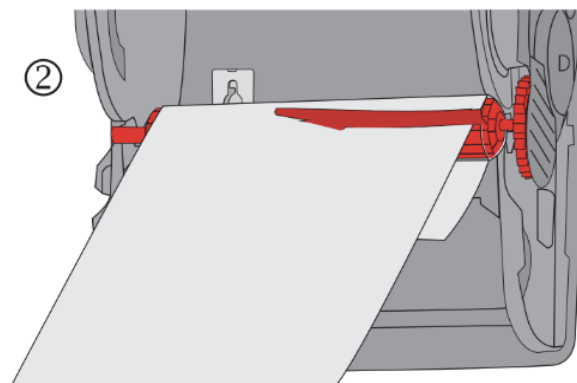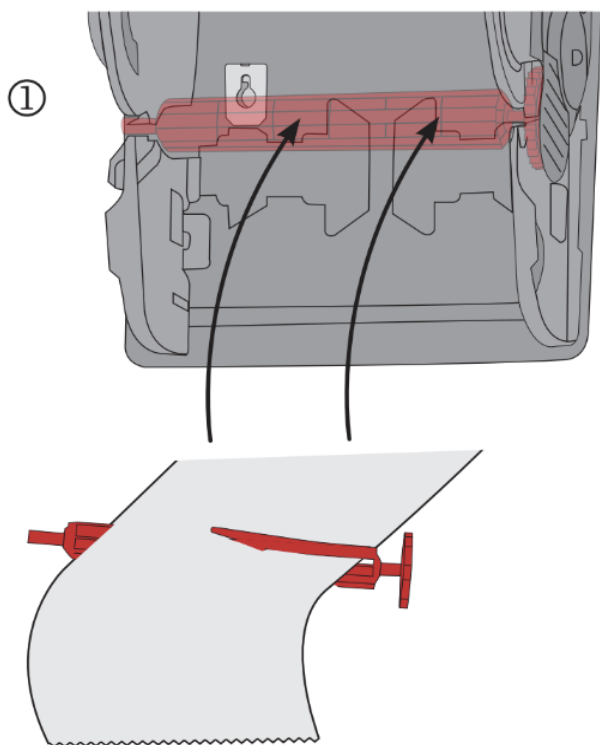


7.

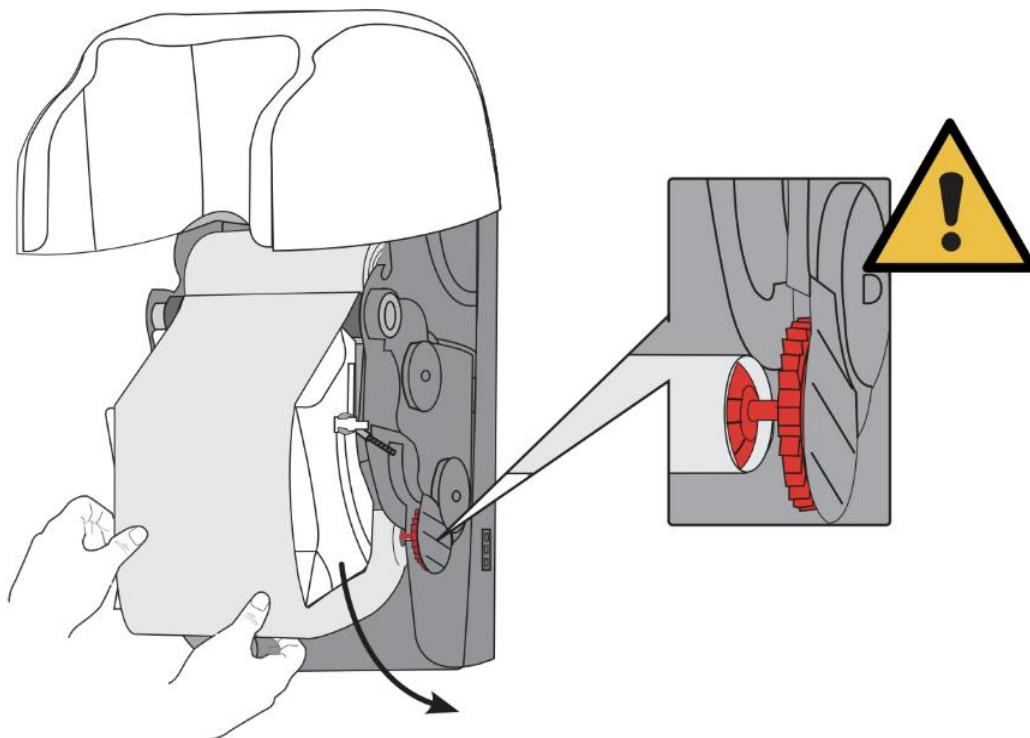

8.

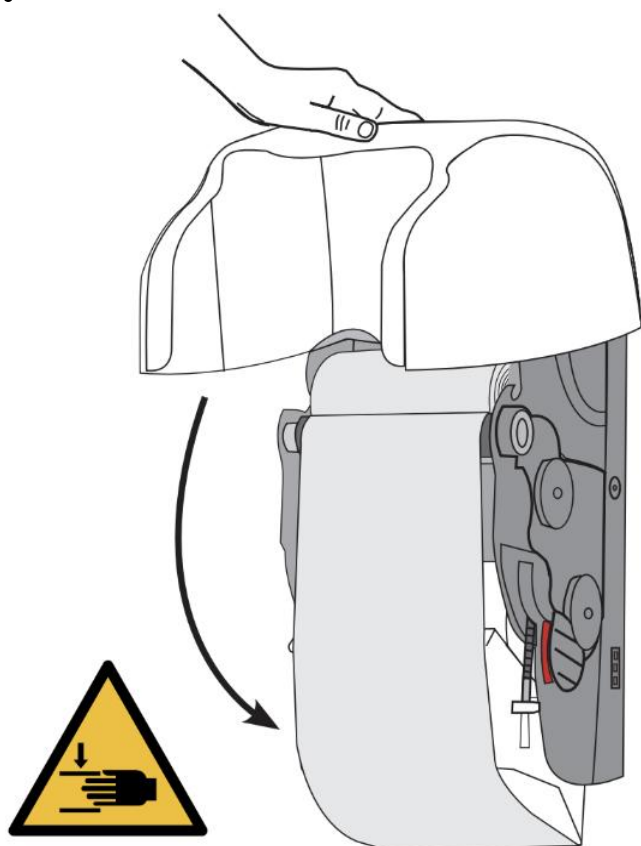

9.

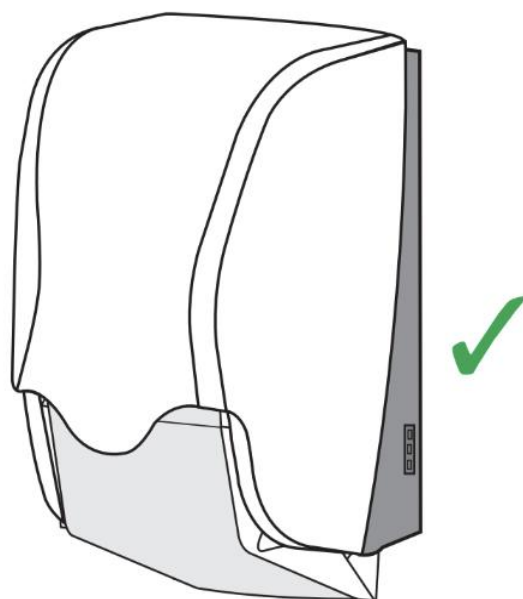


||| ||||| > 70dB


7.

Change half used rolls with automatic function


1.

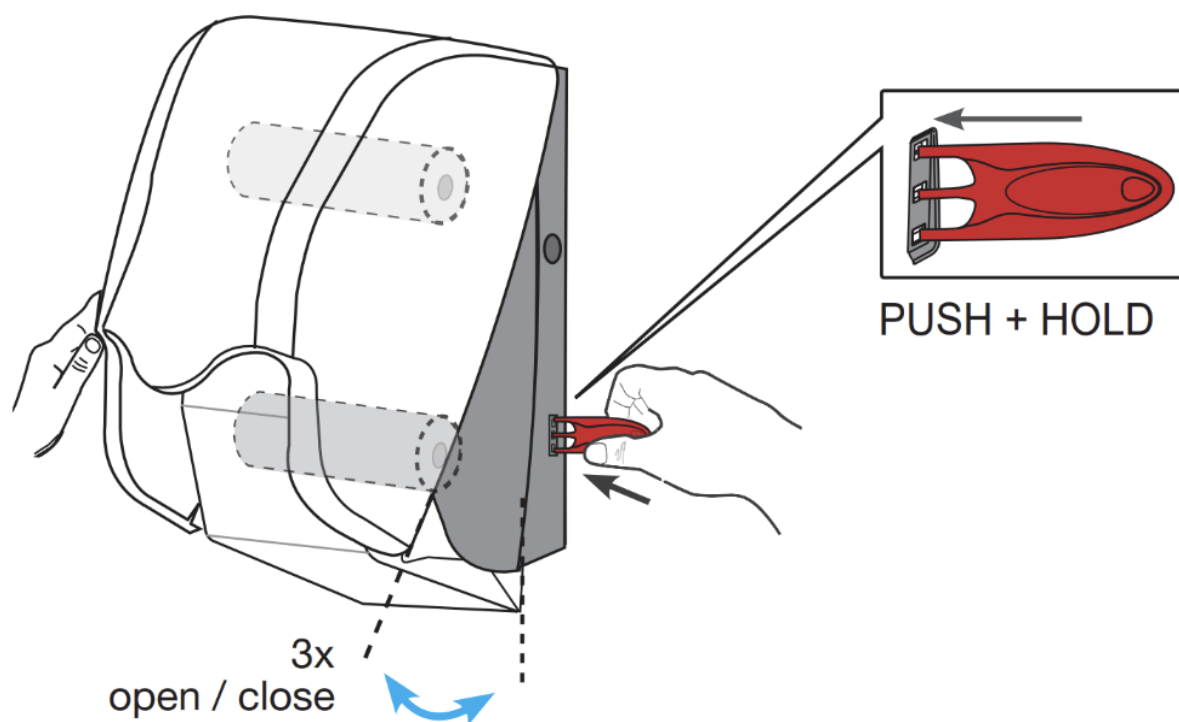

2.

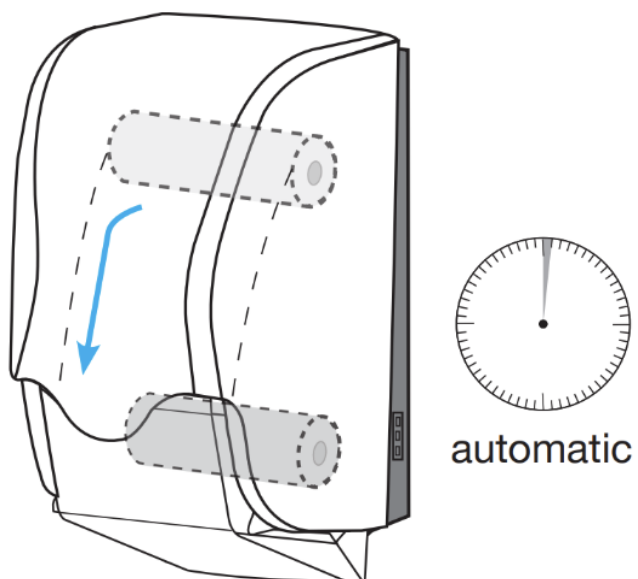


3.

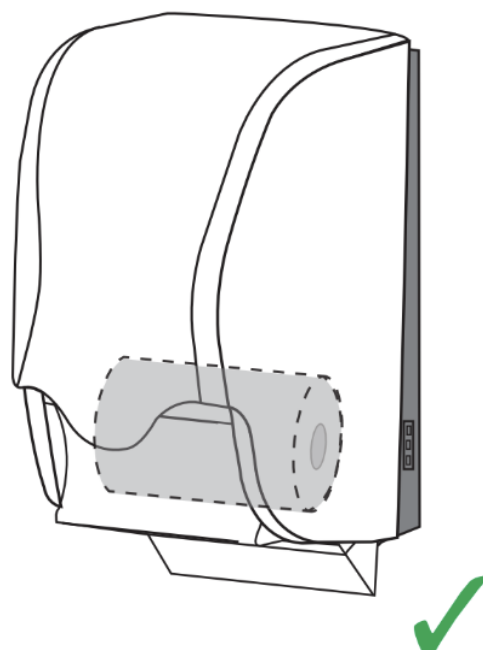


If the roll is to be replaced before the clean roll is completely used, the dispenser can rewind the remaining clean roll with the automatic rewind function.

To start automatic rewind:

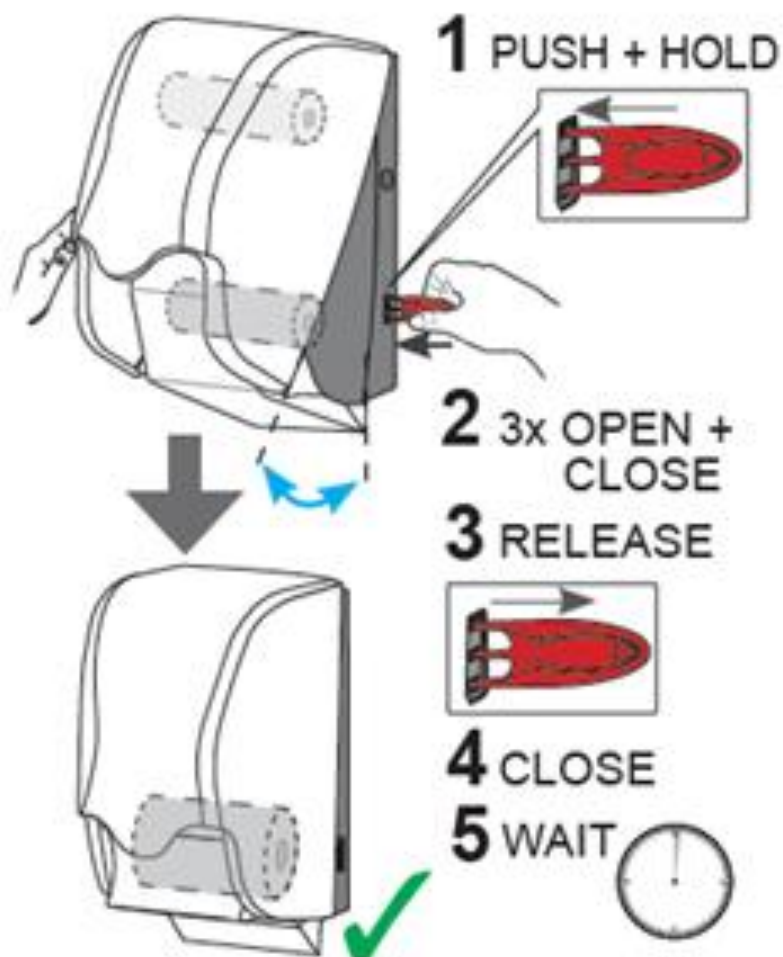

What does the LED indicate

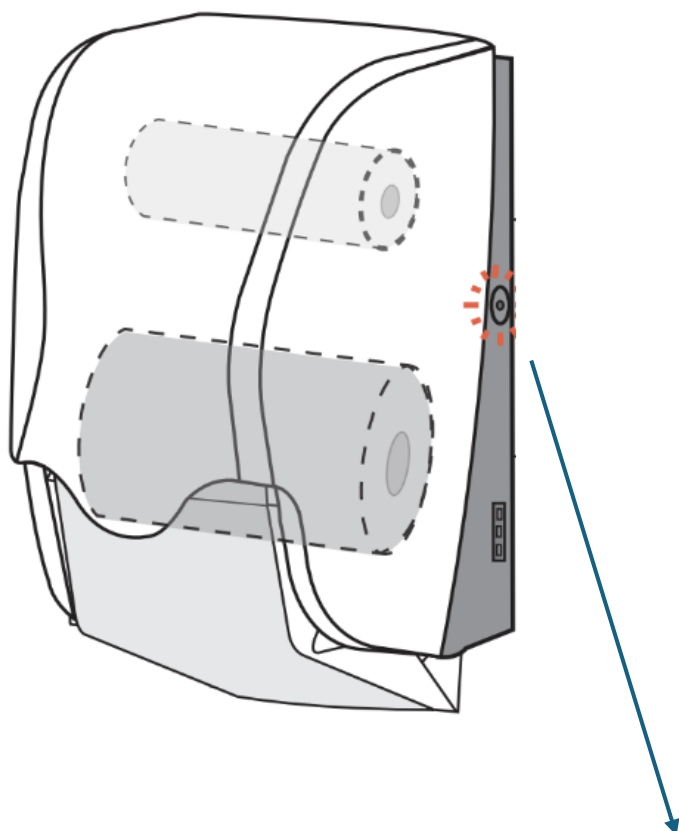

**Battery
connected**

1s



**Towel
level low**

0.1s

4s



**Towel
empty**

0.1s

0.2s

0.1s

4s



**Battery
level low**

0.1s

2s



**Battery
empty**

0.1s

0.2s


0.1s

2s

If the dispenser malfunctions

1:


- Please open and close the lid once.

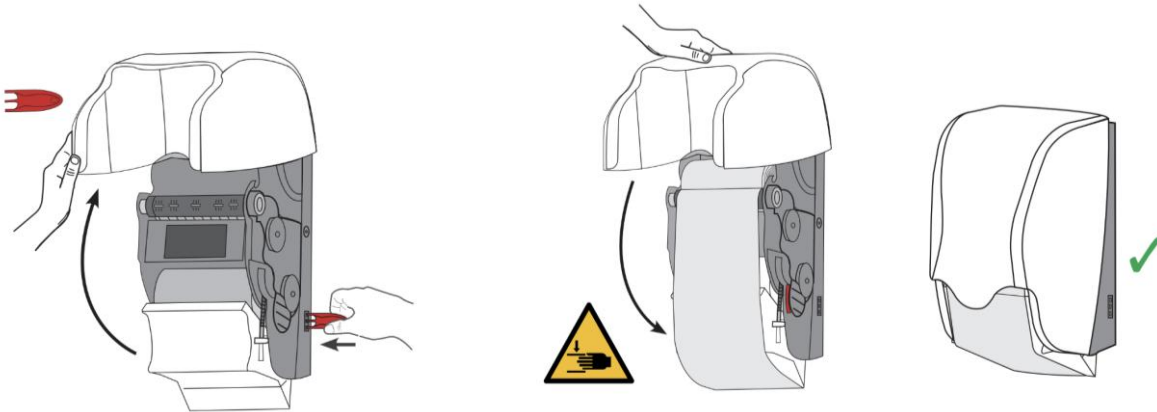

Or/and

2:

- Open the lid, take out the energyBOX for 3 minutes and put it back. Close the lid.

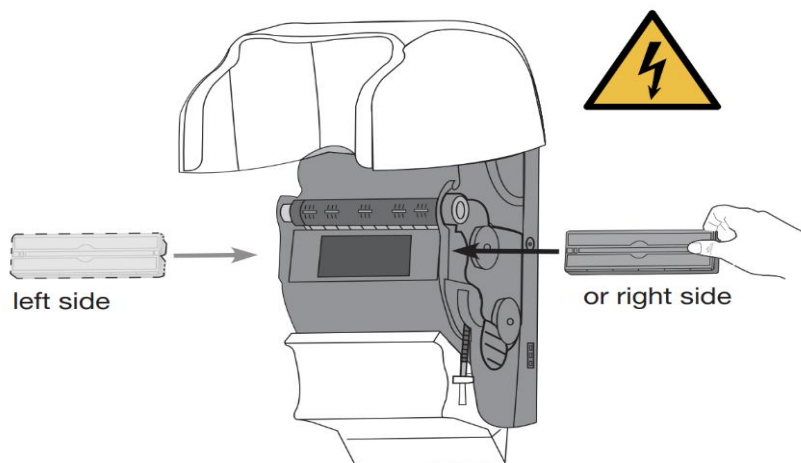

3:

- If the problem persists, order a service visit from Lindström for maintenance.

More product formation from Lindström product document library:

www.lindstromgroup.com/product-documents/

Or by reading a QR-code:

