




***PLUS AUTO CUT PAPER
DISPENSER***


USE MANUAL

CE


1. Put the new roll in the top of the dispenser.

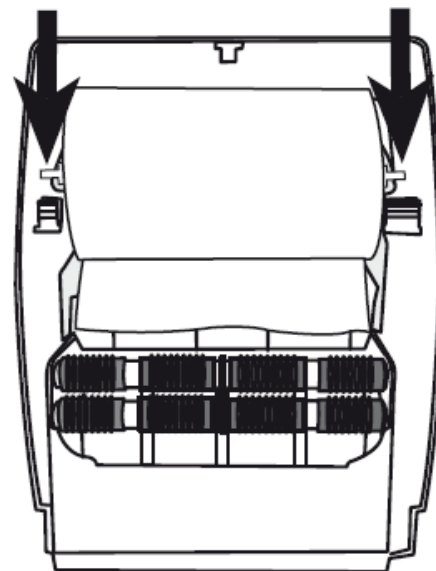

2. As shown on the picture, push the paper between the second small roll and the big one by operating the wheel on the right side of the dispenser. It is important to turn the wheel until the paper feeds out.

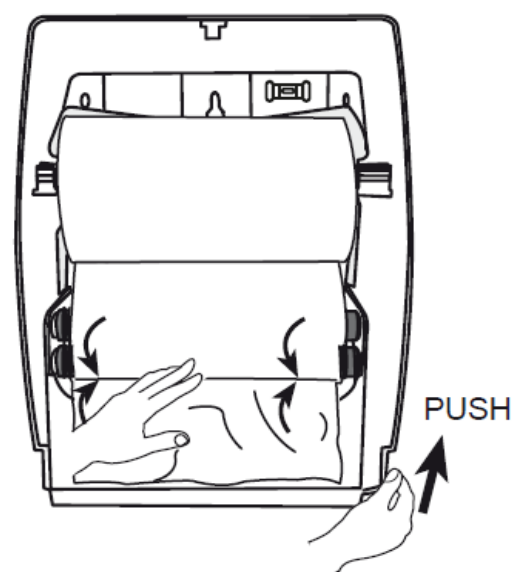

3. Close the lid and test, by pulling the paper with both hands.

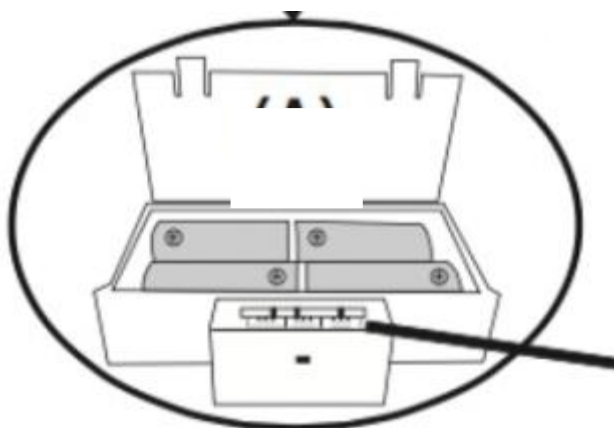

Dispenser settings

Setting	Time delay	Sensor sensitivity	Paper length
S	0 sec	short	200mm
M	2 sec	medium	270mm
L	4 sec	long	340mm

More product formation from Lindström product document library:

www.lindstromgroup.com/product-documents/

Or by reading a QR-code:

