



NOVA Cotton Towel Roll Dispenser instructions

LINDSTRÖM GROUP



1. Avaa kansi avaimella



2. Vedä kaukaloa itseesi päin ja aseta puhdas pyyherulla kaukaloon, niin että pyyhkeen pää tulee rullan alapuolelta



3. Pujota pyyhe yläpuolella olevien rullien välistä, vedä pyyhettä reilusti, laske ylempi pyyhkeen ohjausrulla takaisin ala-asentoon



4. Pujota pyyhe annostelijan takaosasta ylös



5. Kieritä pyyhkeen pää mustan kapulan ympärille n. 6-7 kierrosta, laske kapula alas




6. Työnnä kaukalo takaisin paikoilleen.




7. Sulje kansi ja testaa toimivuus



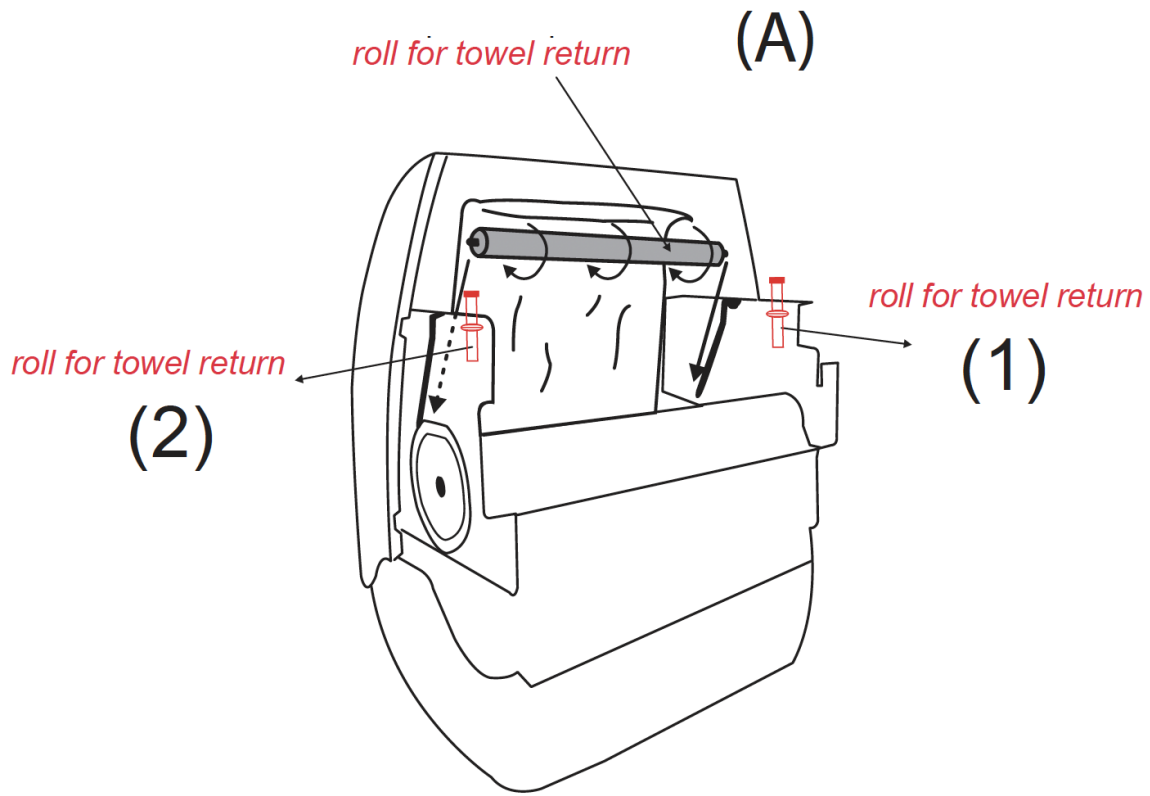


Wrap the towel around the roll about 4/5 turns, then insert the roll in its own seat (A).
 It's possible to set up the time of the towel spooling, acting on the screw (1).
 The screw (2) stop the roll until the wrap time of the towel.
 Is necessary that the stop time (2) is not longer then the wrap time (1).

OPENING DISPENSER INSTRUCTIONS

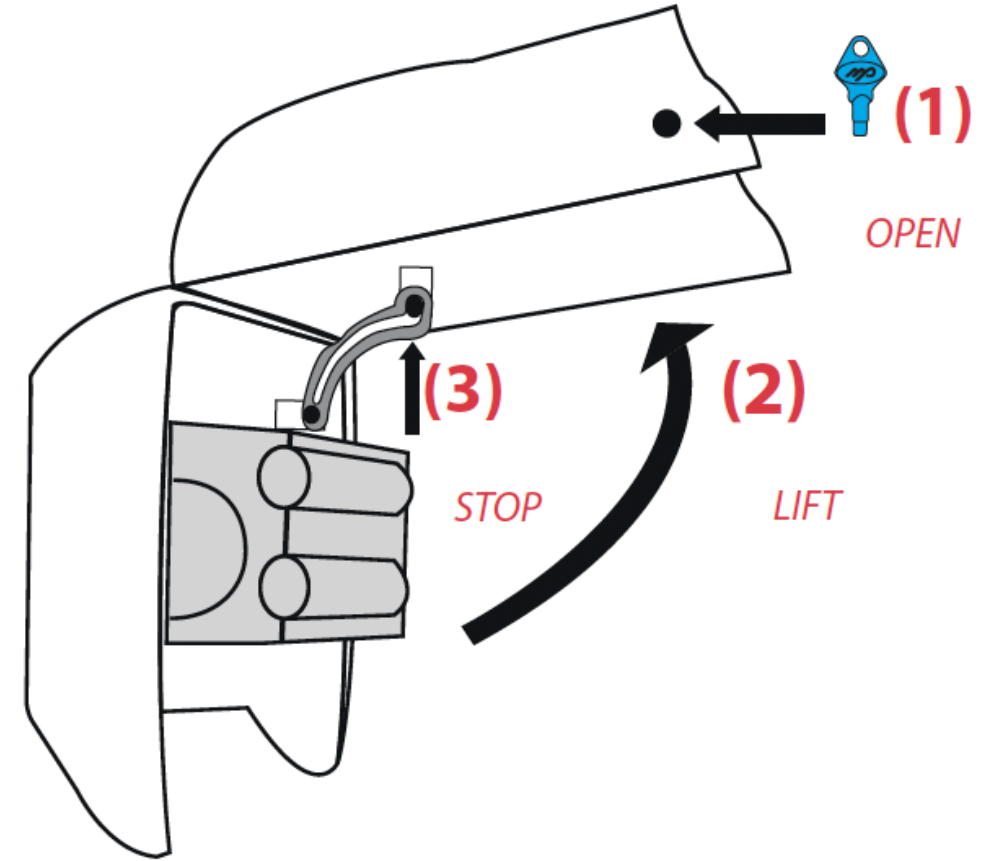


OPEN (1) THE DISPENSER WITH BLUE MP KEY
 LIFT (2) THE COVER UNTIL THE STOP (3)

ROLL LOADING INSTRUCTIONS

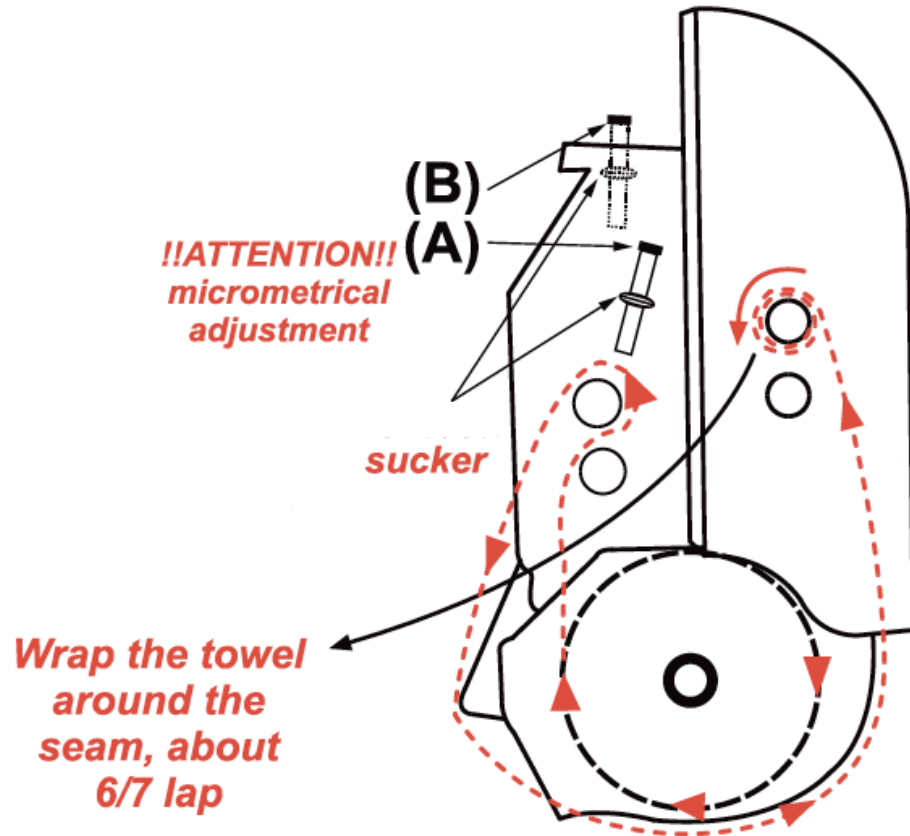

*It's possible to set up the time
of the towel spooling, acting
on the screw (A) and the stop
time of the towel (screw B)*

CLOSING DISPENSER

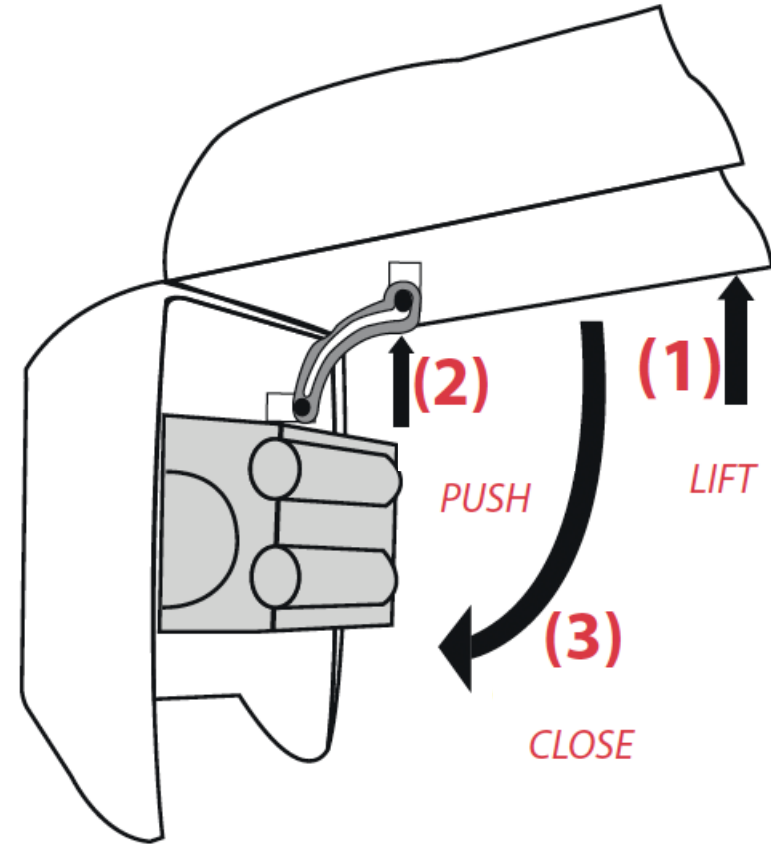

**LIFT (1) THE COVER AND PUSH UP (2) THE STOP LEVER
CLOSE (3) THE DISPENSER**